

# VGP – COMPRESSION SPRING LATCH CHANGE OUT INSTRUCTIONS

Tools Required: Hammer, pliers, screw driver

1. Open VGP stainless steel door, exposing the compression spring latch



2. Using pliers, pull the spring assembly up, which disengages the spring and lock barrel



3. Push the lock barrel down and remove

4. Using pliers, pull the spring out of the new Toolhead compression latch (you may want to hold the bracket in a vise and pull firmly)

5. The new Toolhead compression latch is now in 3 pieces



6. Only the spring and lock barrel are required for reassembly in the door

7. Put the spring into Position



8. Push the lock barrel up through the spring and insert the spring into the hole in the lock barre



9. Push the spring all the way into the hole so that it bottoms out (you may need to use a hammer to complete this)

